 
 


All Measurements Appear in Inches

 
Snare Drum Case

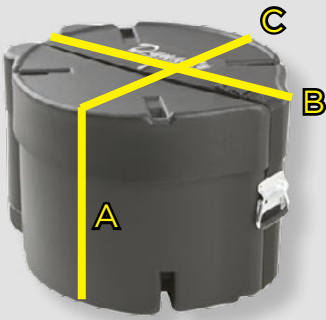

Multi-Tenor Drum Case

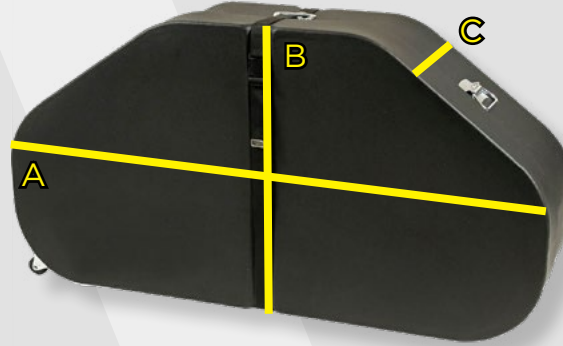

Bass Drum Case

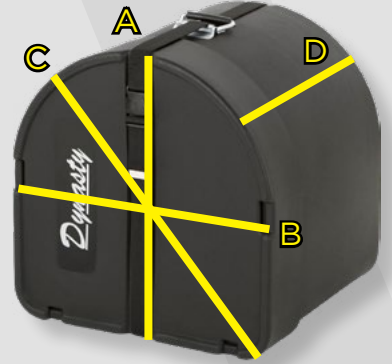

Snare Drum Cases

Item	Description	A	B	C	D	Replacement Strap Item
P30-MPC14	Marching Snare Drum Case	16.5	23	20	-	P400-0100
P30-MPC14S	Wedge/Concert Snare Drum Case	19	19	9	-	P400-0101

Multi-Tenor Drum Cases

Item	Description	A	B	C	D	Replacement Strap Item
P30-MPC8023	Sm. Multi-Tenor Case, up to 13" Tom	48	26.5	15	-	P400-0111
P30-MPC0234	Lg. Multi-Tenor Case, up to 14" Tom	53	28	15	-	P400-0112

Bass Drum Cases

Item	Description	A	B	C	D	Replacement Strap Item
P30-MPC14B	14" Marching Bass Drum Case	15.5	16	18.25	13.5	P400-0100
P30-MPC16	16" Marching Bass Drum Case	17.75	18	21	19.5	P400-0102
P30-MPC18	18" Marching Bass Drum Case	19.5	19.5	22.75	19.5	P400-0103
P30-MPC20	20" Marching Bass Drum Case	21.5	19.5	25.5	20.5	P400-0104
P30-MPC22	22" Marching Bass Drum Case	25	26	29.5	26.5	P400-0105
P30-MPC24	24" Marching Bass Drum Case	27	28	33	26.5	P400-0106
P30-MPC26	26" Marching Bass Drum Case	29	28.5	34.5	21.75	P400-0107
P30-MPC28	28" Marching Bass Drum Case	30.25	31	36.5	19.75	P400-0108
P30-MPC30	30" Marching Bass Drum Case	31.75	32.5	39.5	21.75	P400-0109
P30-MPC32	32" Marching Bass Drum Case	34.5	34.5	40.75	21.75	P400-0110