


## CONTENTS

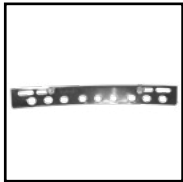

P21-DARB-S  
1 ct. Angle Reduction Bar




P100-0028  
2 ct. Angle Bar L-Bracket




P600-0070  
1 ct. Universal Leg Rest




P23-SNSL  
1 ct. Sling Harness

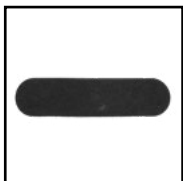

P100-0030  
1 ct. Leg Rest Pad

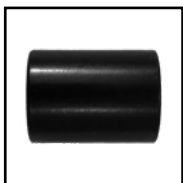

P600-0070-1  
2 ct. Leg Rest Spacer

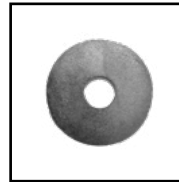


P900-0004  
2 ct. 1/4" x 1"  
Fender Steel Washer




P900-0015  
2 ct. 1/4"-20 Hex Serrated  
Flange Lock Nut



P900-0022  
2 ct. 10-24 x 5/8"  
Carriage Bolt

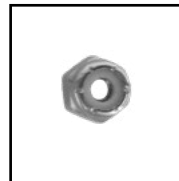

P900-0023  
2 ct. 10-24 Nylon Insert  
Lock Nut

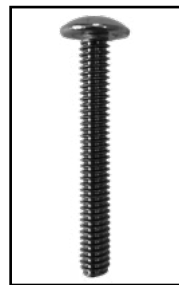

P900-004  
2 ct. 1/4"-20 x 2"  
Phillips Truss M/S

### YOU WILL NEED:

Drum Key

Phillips Screw Driver

Tape

Drill with 9/32" Bit

3/8", 1/2" & 7/16" Wrench



Please follow assembly instructions carefully to ensure optimal product performance.

Questions? Contact us at [info@dynastyband.com](mailto:info@dynastyband.com) or 1.800.558.9416.



## ASSEMBLY INSTRUCTIONS

- 1** Remove bottom drum head and hoop, and tubes bordering leg rest location as shown below.
- 2** Tape Drilling Template to outside of drum as shown below. Center "Drill Here" between tube stabilizer posts. "Bottom of Shell" line must align with shell bearing edge to ensure holes are drilled straight up the drum.
- 3** Drill holes in "Drill Here" circles with 9/32" drill bit as shown below.

- 4** Install L-Brackets on Angle Bar. Reinstall tubes, positioning Angle Bar with L-Brackets between tension collar and tube fitting.

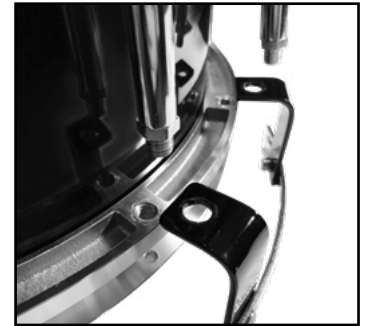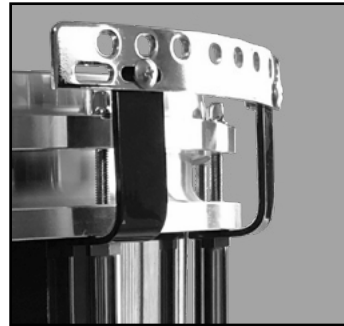

- 5** Install Leg Rest with Washer/Lock Nut inside shell and Spacers between Leg Rest and Shell.

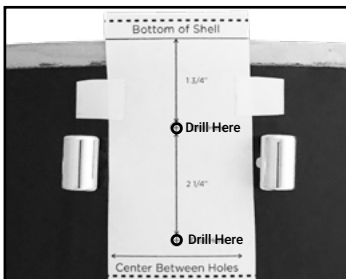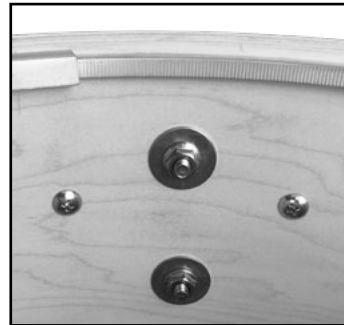

## DRILLING TEMPLATE

**IMPORTANT:** To ensure accuracy of dimensions, print page at 100% size.

*Double check inch measurements in print-out prior to drilling.*

